

 
Doing it right

SECURE YOUR FURNITURE

- Furniture must be securely attached to the wall. Use the tip-over restraint provided with the product and the right hardware for your wall type.
- Never put a TV or other heavy objects on top of a chest of drawers or any furniture not intended for use with a TV.
- Place heavy objects in the lowest drawers.
- Never let children climb or hang on drawers, doors or shelves.

WALL ANCHORING GUIDE

Furniture must be securely attached to the wall. The hardware used to secure your furniture to the wall depends on the material the wall is made of. If the material is not listed or if you have questions, consult a hardware retailer.

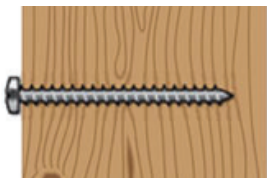


Wall material

Drywall or plaster with available wood stud.

Anchoring device

 Screw inserted directly into stud. For example, a 5mm wood screw provided with Ikea Fixa plug and screw set.

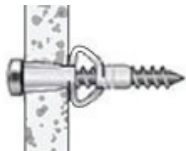

Wall material

Drywall without available wood stud.

Anchoring device

Plug with screw. For example, an 8mm plug provided with Ikea Fixa plug and screw set.

Solid wall



 
Wall material

Masonry

Anchoring device

Solid wall: Plug with screw. For example, an 8mm plug provided with Ikea Fixa plug and screw set.

Hollow wall

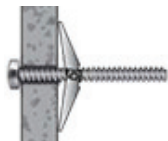

Hollow wall: Toggle-style. For example, a toggle bolt, which has "wings" that open inside a hollow wall, bracing against it to hold the fastener securely.